Installing CPM-200 on a LAN using a Static IP Address

IT personnel will need to supply the following information:

- Static IP Address
- Subnet Mask Address
- Default Gateway Address
- Full Administrator rights for the user account on which the driver is being installed
 - 1. Installing the CPM-200 driver.

Do not connect the USB cable until later on in this guide

Copy the software folder on the USB drive to the C: Drive of the computer and run the '*Start*' application.



This is the screen you should see after running the 'Start' application

Select 'Install CPM-200 printer driver'.





Click on 'Installation of the driver'.



Select 'MAX CPM-200E' and click Next.







Select on 'LAN cable' and click Next.

 MAX Print System Install
 X

 MAX Print System Install
 Select a connecting cable and click on [Next >].

 Connecting cable
 Parallel cable

 Parallel cable
 USB cable

 Image: Connecting cable and click on [Next >].
 Image: Connecting cable and click on [Next >].

 Image: Connecting cable and click on [Next >].
 Image: Connecting cable

 Image: Connecting cable
 I

2: Assigning Static IP Address to designated printer port.

When the dialogue box displayed here appears, enter the static IP address, and then click

Appiy.
*Be su
proble
The pr
promp
should

Be sure to enter this correctly, else you will run into problems later on in the process

The printer driver will install and you will be prompted to restart your computer, which you should do so '*immediately*'.





3. Using the IP Address Tool – Located in the below folder on USB drive – (run MCP200IPS Application)

CPM200 IP Address Tool

Connect the CPM-100HG5 via USB cable, turn the printer on and run the '*MCP200IPS*' application (Printer IP Address Setting Tool). The dialogue box displayed below should appear.

Main Body IP Address Setting Tool X	
Turn on the main body and connect with a USB cable.	ble check that the -200E ′ is selected in the lown list*
Current Settings	
IP Address:	
IP Address Settings	
IP Address: 192.168.11.1 Registration	
Detailed Settings End	

Click on '*Find*'. This should reveal the default IP and MAC Addresses of the motherboard.

Click the 'Detailed Settings' checkbox and enter the following addresses provided by IT personnel:

- IP Address (this is the same as the Static IP Address used in step 2)
- Subnet Mask
- Default Gateway





A screenshot of this is provided on the next page

PAddress Settings	
Subnet Mask: 255.255.255.0	Registration
Default Gateway: 192 . 168 . 0 . 1	
✓ Detailed Settings	
<u>,</u>	End

Finally, click on 'Registration' and then 'End'.

Other Important Notes

- DHCP is not supported
- You cannot print from both a USB cable and network cable simultaneously. If you no longer wish to network the printer and only use the USB cable, the driver must be uninstalled and reinstalled, selecting '**USB cable**' as seen in step 1.
- If you wish to print over the LAN from other laptops/computers, you only need to follow steps 1 & 2.
- **'Use printer offline**' must be **disabled** for the CPM-200 in Printers & Scanners (or Devices and Printers), else the printer will not respond despite the status monitor displaying 'Available to Print' when printing over a network.



